

The background of the page is a close-up photograph of a wood grain, showing natural textures and variations in brown tones. A solid teal-colored triangle is positioned in the bottom right corner, pointing towards the center of the page.

# Modular **Resilient** Flooring LVT Maintenance Guide

Interface®

## General Maintenance

Interface Luxury Vinyl Flooring can be easily cleaned using normal floor cleaning devices such as a household broom, a suction-only vacuum cleaner, or a damp mop. Always use non-aggressive maintenance products like liquid cleaning solutions and microfiber mops and cloths.

NEVER use products that can damage the surface of your LVT. These type products would include powdered cleaners, metal-bristle brushes, or steel wool. Do not soak floor with water or liquid cleaners and do not allow puddles of water to remain on the floor.

Regular maintenance will keep your floor looking good and help protect the surface from scratches and blemishes.

### Maintenance after installation

- Clean the floor after 48 hours from the completion of installation.
- Start with dry sweeping or dust mopping to remove as much dry soil as possible.
- Follow this with wet mopping using a neutral cleaning solution (pH of 6 - 8) and a microfiber mop. Make sure to use a liquid cleaning solution that is Ready-to-Use or dilute the cleaner with the proper amount of water.
- Rinse mop often with clean water while mopping to remove contaminants from mop.
- After mopping with cleaning solution, rinse floor with clean hot water and microfiber mop.
- Allow floor to completely dry before foot traffic is resumed.
- Always use a damp mop. Do not pour water directly on the floor and do not allow puddles of water to remain on the floor.

## Precautions

### Daily cleaning & maintenance

Depending on foot traffic and the level of dirt, intensive cleaning will become necessary after a certain time.

- Dry soil removal should be done on a daily basis or more frequently with heavy traffic.
- Remove dry dust and dirt with a broom or dust mop.
- Floor should be wet cleaned a minimum of once a week using a neutral cleaning solution and a microfiber mop.
- After removal of the dirt, clean the floor with hot water.
- Allow floor to completely dry before foot traffic is resumed.
- Always use a damp mop. Do not pour water on the floor and do not allow puddles of water to remain on the floor.
- For large areas it is acceptable to use an auto scrubber with a non-abrasive pad (Red or White 3M Floor Pad).

Always fix felt pads to the feet of chairs, tables and cupboards. Protect your flooring and reduce dirt and gravel by using floor mats at the entrances of the rooms. Rubber can damage the LVT flooring irreparably, so avoid mats with rubber lining, rubber furniture legs or rubber wheels. Office chairs must be provided with soft wheels. Dragging heavy household appliances or furniture over the flooring without protection may also damage the flooring. Be careful with kitchen appliances, cigarettes and hot or heavy objects that can damage the floor when falling.

[www.interface.com](http://www.interface.com)

#### Australia

Interface Australia  
Local toll free: 1800 008 101  
[www.interface.com](http://www.interface.com)

#### Beijing Studio

Interface China  
Tel: 86-10-6590 7810  
[www.interface.com.cn](http://www.interface.com.cn)

#### Japan

Interface Japan  
Tel: 81-3-5733 5211  
[www.interface.com](http://www.interface.com)

#### Hong Kong Studio

Interface China  
Tel: 852-2802 0838  
[www.interface.com.cn](http://www.interface.com.cn)

#### Shanghai Studio

Interface China  
Tel: 86-21-6340 3868  
[www.interface.com.cn](http://www.interface.com.cn)

#### South East Asia

Interface Asia  
Tel: 65-6478 1510  
[www.interface.com](http://www.interface.com)



**Mission Zero**<sup>®</sup>

our promise to eliminate any negative impact our company may have on the environment by the year 2020.