



# Wall preparation/rough in for Livella On-slab and In-slab under floor heating

See the installation checklist for further details

## On-Slab

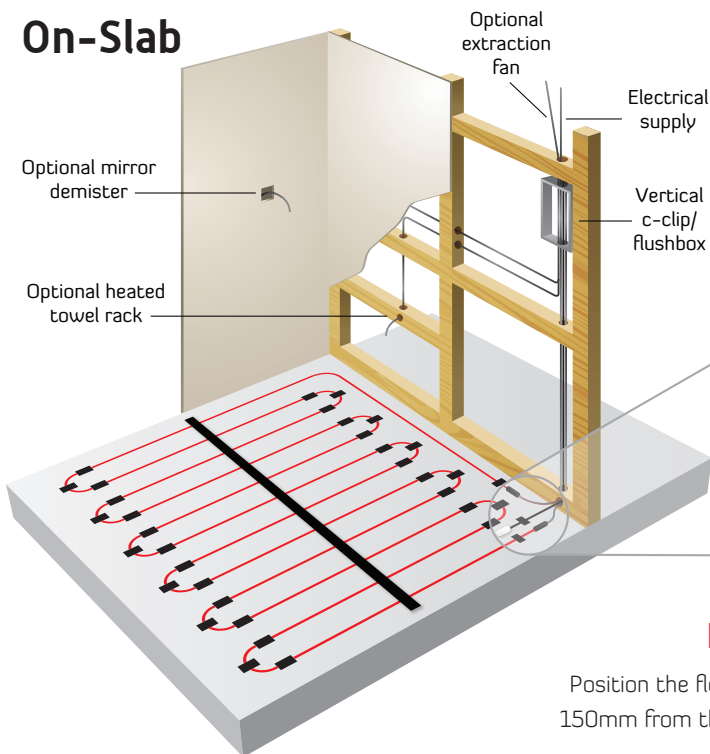


## Probe & Cold Lead Termination Placement

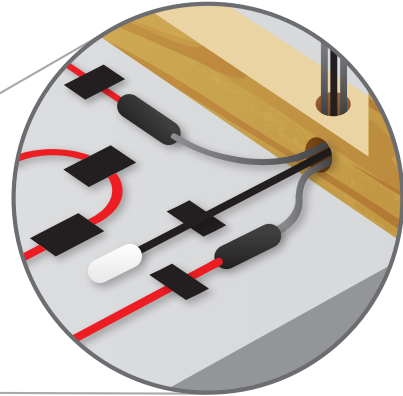


## Positioning the Cold & Sensor Leads

Position the floor temperature sensor between two runs of the cable and at least 150mm from the wall. Then, pull the cold leads and sensor lead into the wall leaving the black cable connections fixed to the floor.

## In-Slab

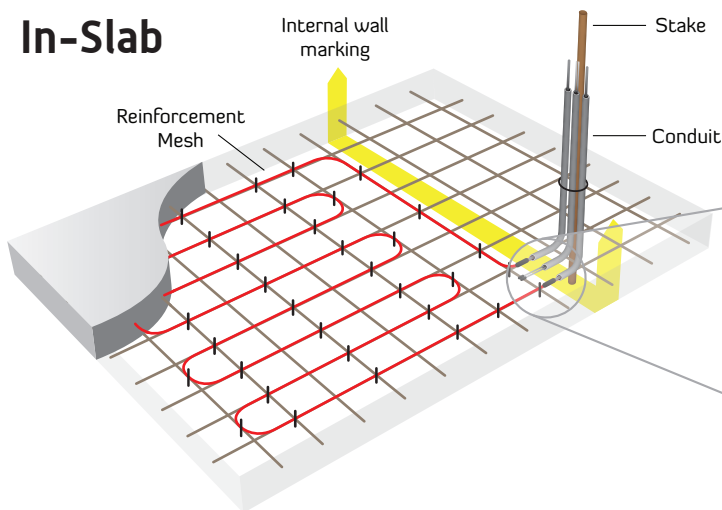

## Probe & Cold Lead Termination Placement

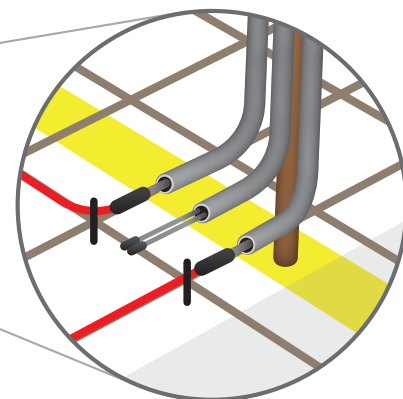

## Positioning the Cold & Sensor Leads

Position the floor temperature sensor at the same depth as the heating cables between two cable runs and at least 200mm from the wall. Then, pull the cold leads and sensor into the conduit leaving the terminations within the area to be concreted.

**Note:** The sensor should be installed in a conduit with no more than one gentle bend from floor level to the thermostat.

### Australia

PO Box 3929  
Robina Town Centre  
Queensland 4230

T: 1800 833 933  
F: 1800 133 134  
E: [info@livella.com](mailto:info@livella.com)

### New Zealand

PO Box 35812  
Browns Bay  
North Shore City 0753

T: 0800 432 892  
F: 0800 443 289  
E: [nz@livella.com](mailto:nz@livella.com)



[www.livella.com](http://www.livella.com)